

## Set Port Forwarding for TurboSpeed TCG220-T

1. Type **192.168.1.1** then press Enter, type Username = admin, Password = password and press Login



2. On top, click Advance > Forwarding and click Create IPv4



©. All rights reserved.

3. Enter the values in table which will base on Service the customer wants to set up, once completed, click Apply

## Advanced

### Forwarding

This allows for incoming requests on specific port numbers to reach web servers, FTP servers, mail servers, etc. accessible from the public internet. A table of commonly used port numbers is also provided.

Local IP:


Local Start Port:

Local End Port:


External IP:

External Start Port:

External End Port:

Protocol:   TCP  
UDP  
BOTH

Description:

Enabled:   Off  
On

Application	Port
HTTP	80
FTP	21
TFTP	69
SMTP	25
POP3	110
NNTP	119
Telnet	23
IRC	194
SNMP	161
Finger	79
Gopher	70
Whois	43
rtelnet	107
LDAP	389
UUCP	540

Local			External			Prot	Description	Enabled	Remove All
IP Address	Start Port	End Port	IP Address	Start Port	End Port				