


APN setting steps to use
Truemove-H internet

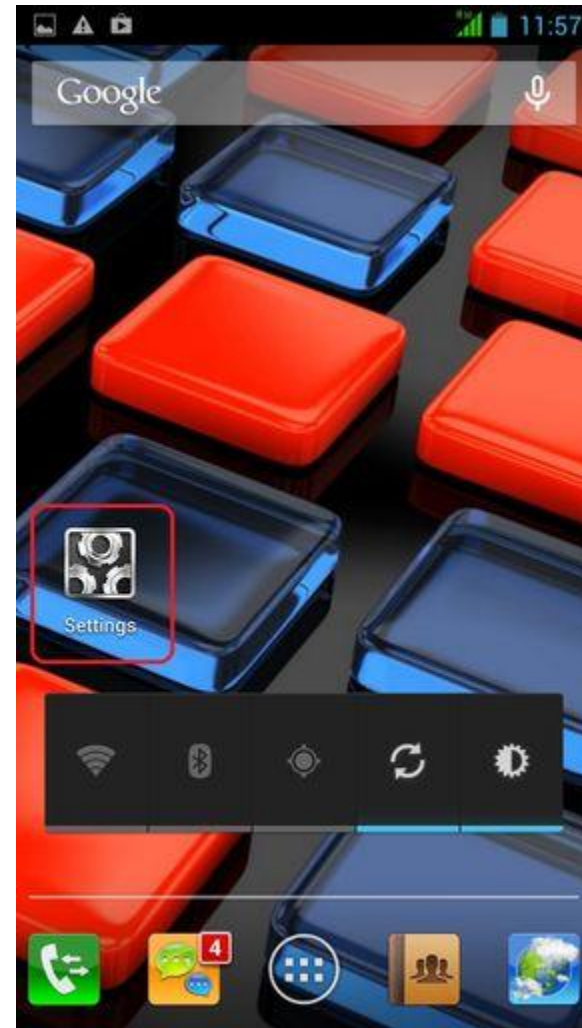


1. Select icon "Settings"




2. Select "More..."



3. Select "Mobile networks"

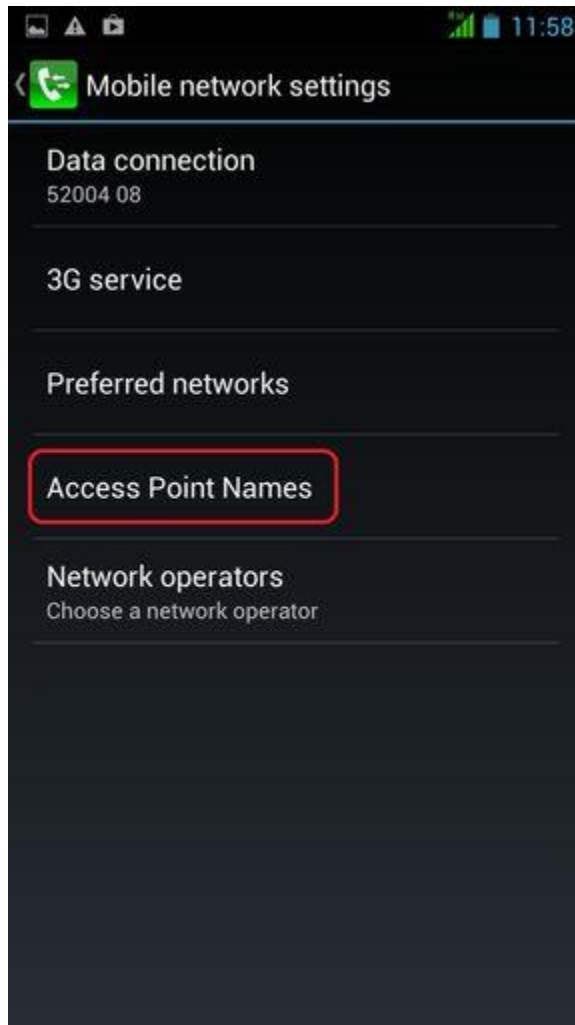


4. Select Access Point Names

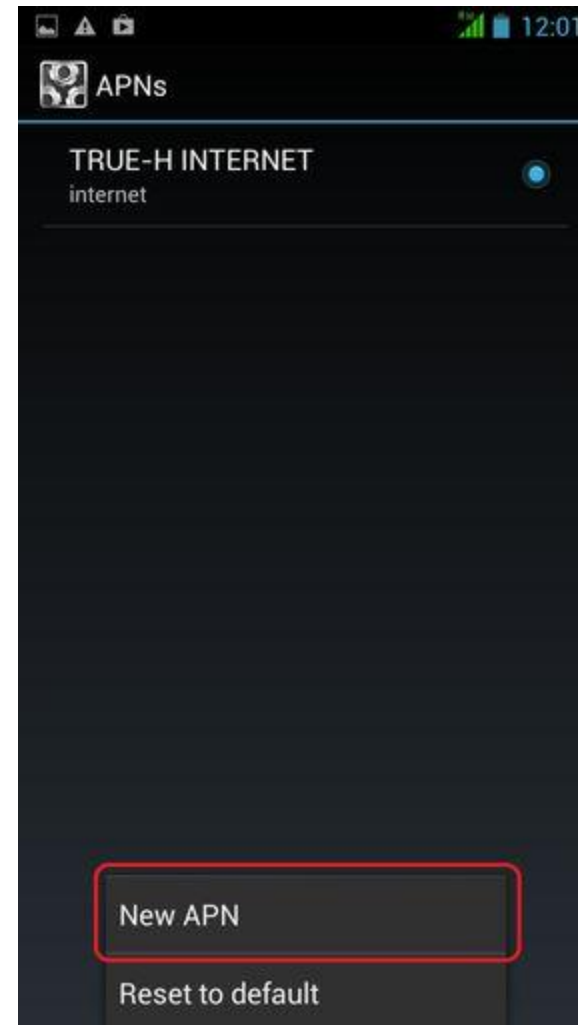

5. Press  on phone. Then select popup menu "New APN"



6. Input Name, APN, APN type and Username as shown in picture.
Then press 

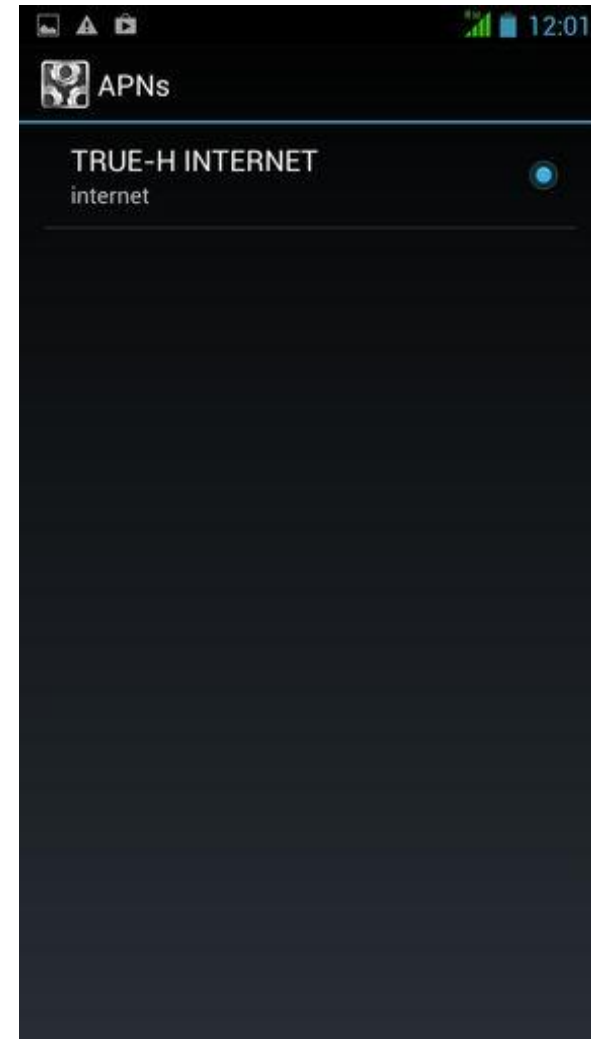

7. "TRUE-H INTERNET" APN has been selected.
Now you can access an internet.